Murphy Wallbed Systems, Inc.

2650 N. Lakeview #308 Chicago, IL 60614 Ph (773) 248-5188 Fax (773) 281-6430 Toll Free (877) 887-1717 (Previously Murphy Beds Chicago)

Murphy Bed Assembly – Bi-Fold Closure Model # MB


MB-S - Single/Twin

MB-D - Double/Full

MB-Q - Queen


This Product may be covered by one or more patents or patents pending in the United States and Foreign Countries

MURPHY BED ASSEMBLY
Murphy Wallbed Systems, Inc.

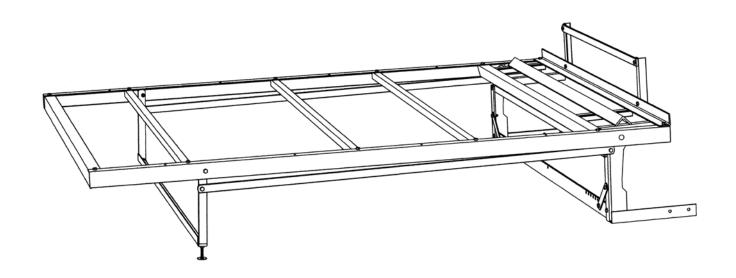


MURPHY BEDS - HARDWARE BOX CONTENTS				
	(1)	Right Floor Yoke 11.5 "x11.5"		RFY
	(1)	Left Floor Yoke 11.5"x11.5"		LFY
	(1)	Weldment Single - 10"x35" Double - 10"x50" Queen - 10"x56"		SWELD DWELD QWELD
	٠	000000		
	(24)	Hex Hd. Screws 1/4-20 x 3/4"		UMB75
	(6)	Hex Hd. Screws 1/4-20 x 1.25"		UMB125
	(34)	Nylon Insert Blk. Locknuts		UMNNYL
	(8)	Concrete Anchors		UMANC
	(2)	Leg Levellers		UMLEV
	(4)	Nylon Washers		UMWNY
	(2)	Nylon spacers .500-O.D. x .26-I.D.		UMSPNY
	(2)	Zinc Washers 3/4"-O.D. x 3/16"		ZW
	(2)	Quadrex Pan Hd. Screws 8 x 5/8"	Quantum	PHS625
	(2)	Velcro Straps		VS-46
	(6)	Springs-Single		1225
	(8)	Springs-Double		
	(10)	Springs-Queen		


MURPHY BEDS - UNIVERSAL BOX CONTENTS

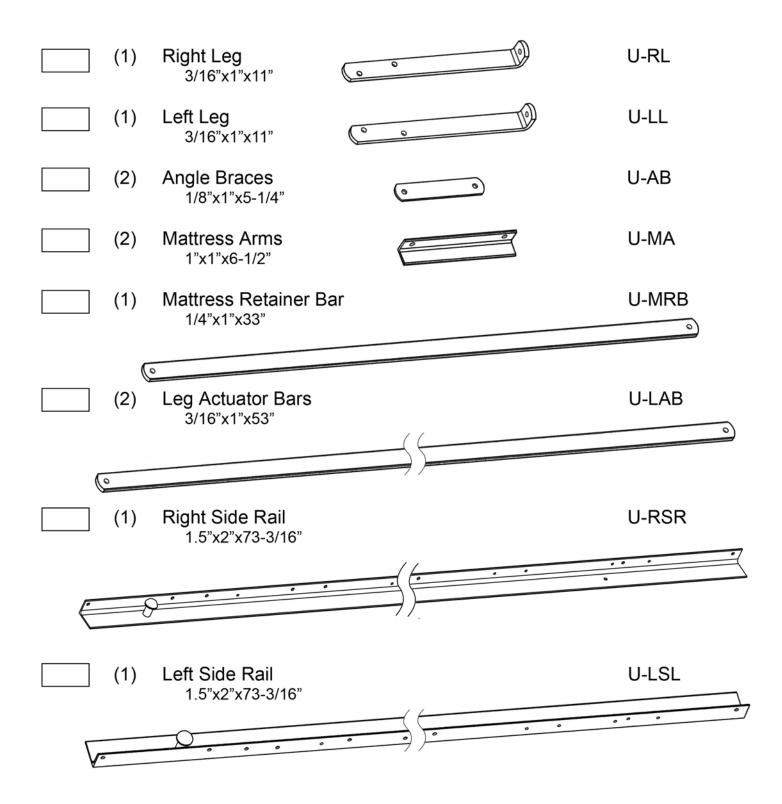


MURPHY BEDS - SINGLE ANGLE BOX CONTENTS

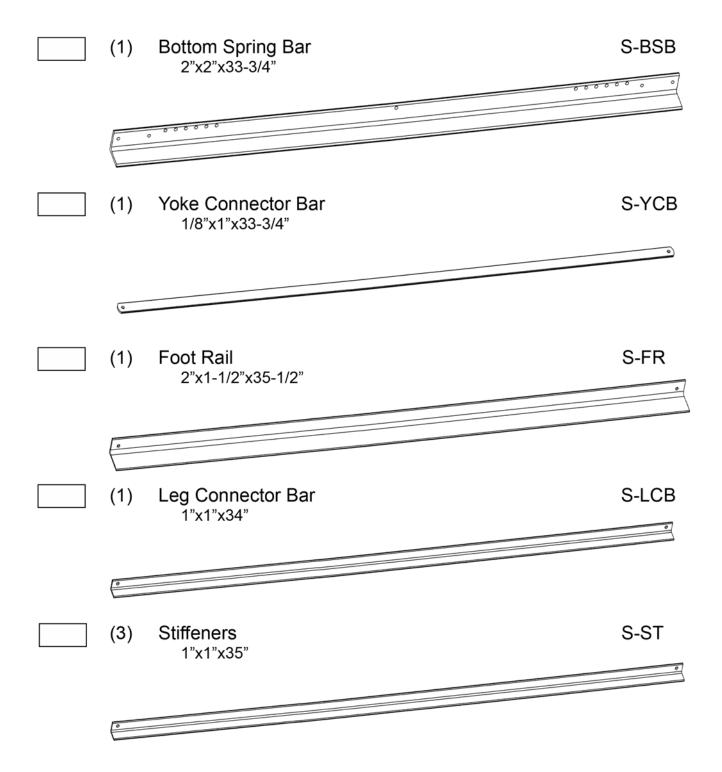

MURPHY BEDS - DOUBLE ANGLE BOX CONTENTS

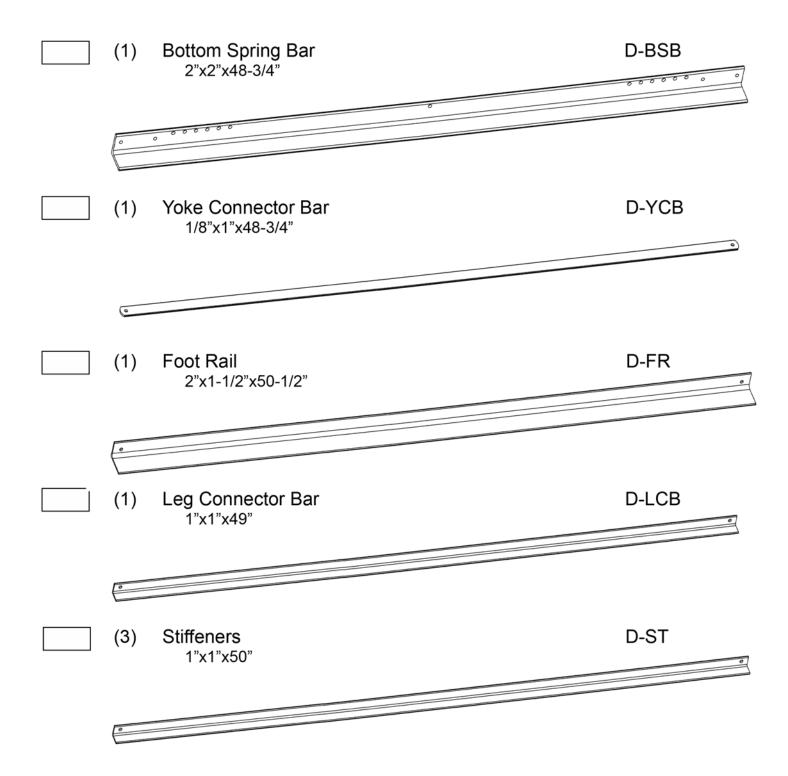


MURPHY BEDS - QUEEN ANGLE BOX CONTENTS

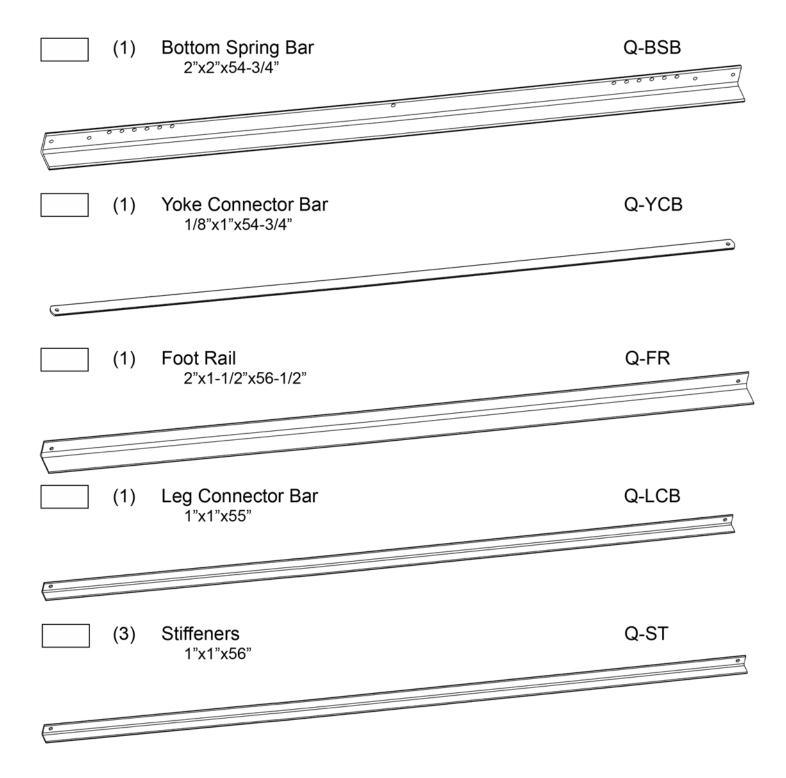



MURPHY BEDS - YOKE ASSEMBLY

LFY - Left Floor Yoke
RFY - Right Floor Yoke
LAB - Leg Actuator Bar
YCB - Yoke Connector Bar
BSB - Bottom Spring Bar
AB - Angle Brace
UMWNY - Nylon Washer
U - Double
UMNNYL - Nylon Insert Locknut
U - Universal
UMB125 - 1-1/4" Bolt

- Fasten right floor yoke (RFY) and left floor yoke (LFY) loosely to the bottom spring bar (-BSB) with two pairs of 3/4" bolts (UMB75) and nylon insert locknuts (UMNNYL). See figure 2.
- Fasten angle braces (U-AB) and yoke connector bar (-YCB) to pieces from step 1 with 3/4" bolts (UMB75) and nylon insert locknuts (UMNNYL). See figure 2.
- 3. Tighten down bolts and nuts.
- Attach leg actuator bars (U-LAB) to floor yokes using 1-1/4" bolts (UMB125), nylon washers (UMWNY) and nylon insert locknuts (UMNNYL). Tighten snug.
- Position frame on floor inside wall cabinet with equal space on the left and right.
- Position front of Yoke 14" (minimum) from wall and mark anchor holes on floor.
- Remove frame and drill holes. Install anchors (UMANC) in holes. See figure 3.
- Attach frame to floor with anchor bolts. See figure 3.

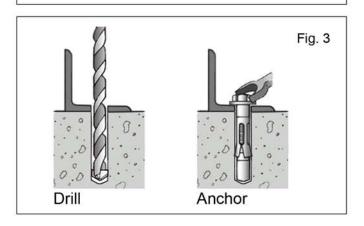

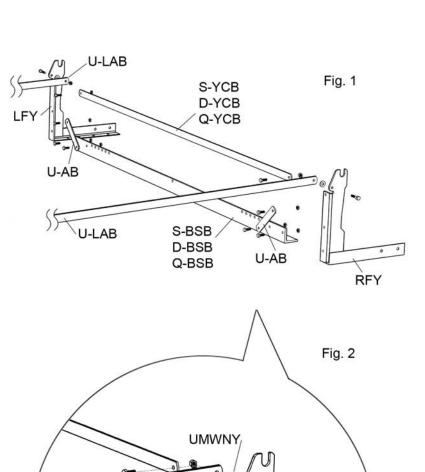


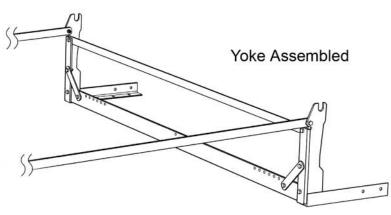

UMNNYL

UMB75


UMB125

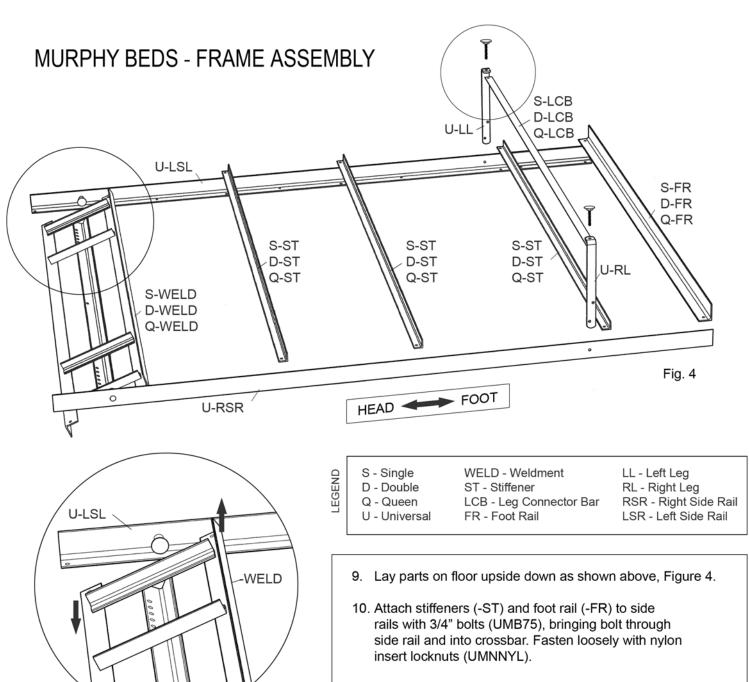

- 11. Using 3/4" bolts (UMB75), attach the provided weldment (-WELD) to the side rails with the spring holes towards the head of the bed. Make sure the weldment straddles the side rails as shown to take stress off the bolts. See figure 5 to the left.
- 12. Square the frame, then tighten all bolts and nuts.
- 13. Attach left and right legs to side rails of frame using the nylon spacers (UMSPNY) with the 1-1/4" bolts (UMB125), and tighten snug. Note: The holes used to connect to the legs to the side rails are offset towards the head of the bed.
- Attach leg connector bar (-LCB) using the adjustable leg levellers (UMLEV) and two nylon insert locknuts (UMNNYL) as shown in figure 6.

Fig. 5

MURPHY BEDS - FRAME ASSEMBLY

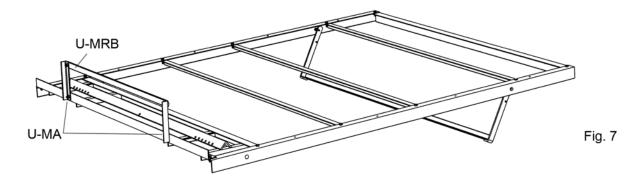

- 15. Turn the mattress frame right side up.
- 16. Attach the two Mattress Arms (U-MA) to the head of the frame and attach the Mattress Retainer Bar (U-MRB) to the ends of the the Mattress Arms. Fasten pieces together with 3/4" bolts (UMB75) inserted from the mattress side. See figure 7.
- 17. Place the bed frame assembly vertically onto the floor yoke assembly as shown in figure 8.
- 18. Attach the tops of the leg actuator bars to the leg assembly with 1-1/4" bolts (UMB125), nylon washers (UMWNY), and locknuts (UMNNYL) and tighten snug. Figure 9.
- 19. Bring to a vertical position to install springs. Place spring hooks into the Bottom Spring Bar (_BSB) first and with a screwdriver pull the top spring hooks into their respective holes in the weldment piece (_WELD). See figure 10.

